




Airex / Airoom Hub Install Process

Winter 20/21

1 | Setting up the AirEx hub

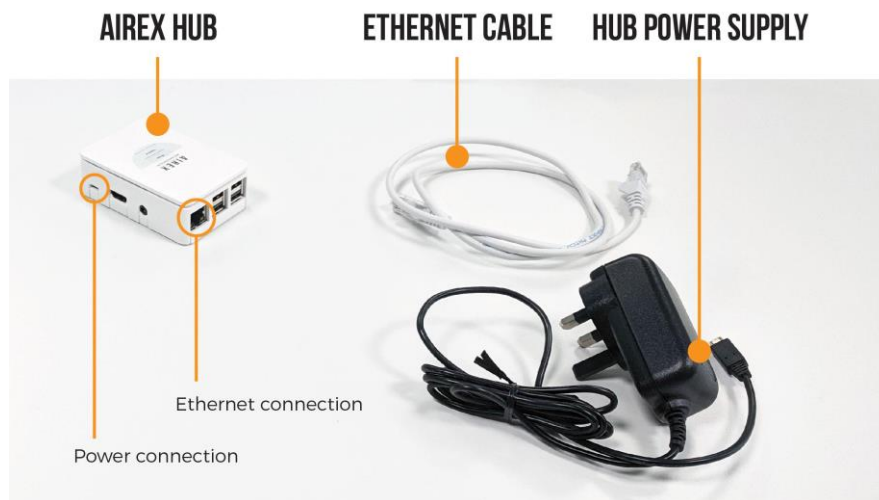

A. Locate home internet router:

- i. Ensure there is an available mains socket for powering the hub? If not use a 2-gang adaptor to create an extra socket.
- ii. Ensure there is there an available ethernet port? If not, consider connecting the hub to wi-fi.

B. Place the home hub:





Due to the sensors included in the hub, where possible, position the hub as follows:

- In the most used room of the property (i.e. living room)
- Around chest height to read the average room temperature
- Away from sources of heat (such as radiators or direct sunlight)
- Away from windows and sources of ventilation
- In good air circulation and not behind big objects (such as TVs)

C. Connect AirEx hub to ethernet & power

- i. Wait 30 secs for hub to boot up

D. Verify hub responses on start-up

LED Colour	LED behaviour	Diagnostic Information
	Solid light	Hub successfully start-up and connected to the internet
	Flashes for 1s	Hub successfully sent a message to database
	Solid light	No connection to the internet - check connections & hard reset
	Solid	Hub error - requires hub replacement